Installation TopFix / RecessFix [R1]

Model
BB24

Do not damage the product when using a sharp knife to open the packaging! Fitting screws: Use a size-2 screwdriver (POZIDRIVE) or use an electric screwdriver at it's lowest torque. Rail removal: Use a flat screwdriver of max. 6 mm wide. Only use the original screws enclosed, to prevent malfunctioning from using too thick screw heads!

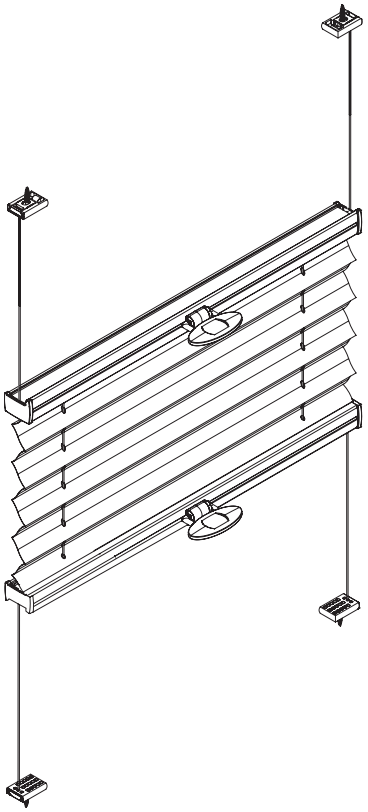

Product width	Number of parts	
0 - 120 cm	4	4

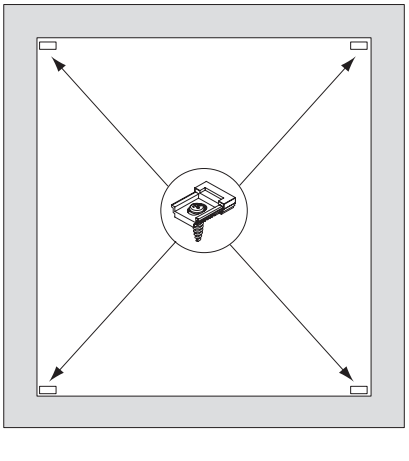

Footplate installation (top)

1

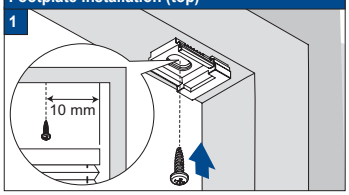

Footplate installation (bottom)

2

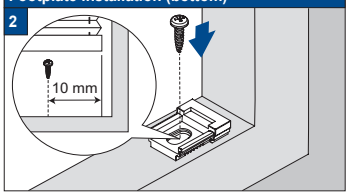

Installation sequence

3

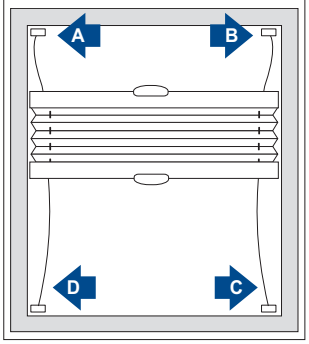

Footplate installation sequence

3-A1

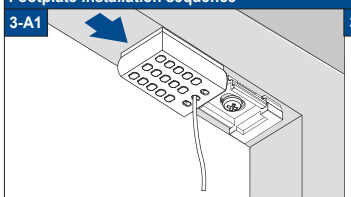

3-A2

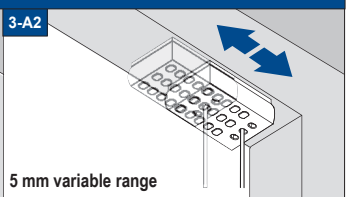

3-B/C/D 1

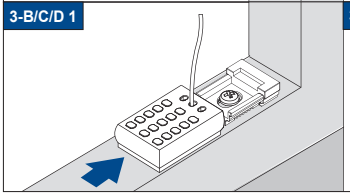

3-B/C/D 2

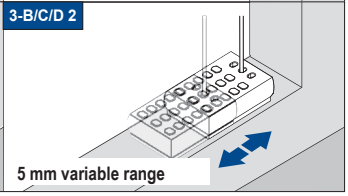

Operation

4

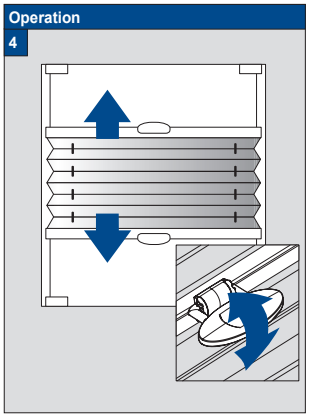

Removal

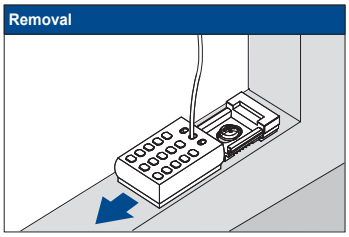

FaceFix installation to a window frame / wall [F1]

Do not damage the product when using a sharp knife to open the packaging! Fitting screws: Use a size-2 screwdriver (POZIDRIVE) or use an electric screwdriver at it's lowest torque. Rail removal: Use a flat screwdriver of max. 6 mm wide. Only use the original screws enclosed, to prevent malfunctioning from using too thick screw heads!

Model
BB24

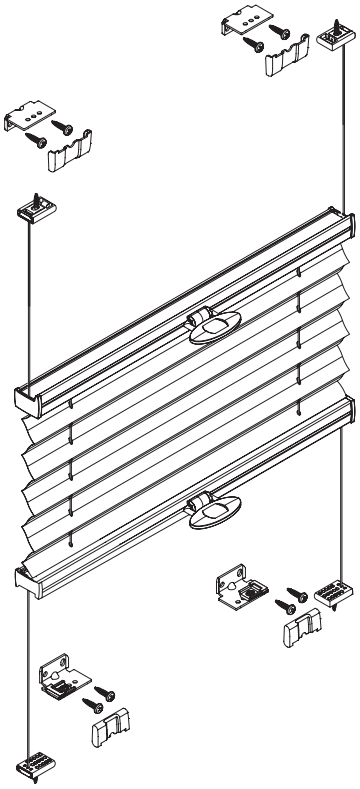

Product width	Number of parts				
0 - 120 cm	4	4	4	8	4

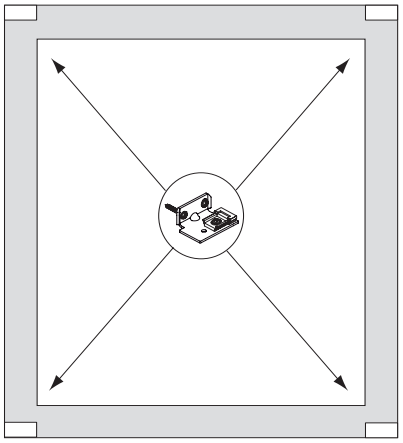



Footplate installation (top)
1

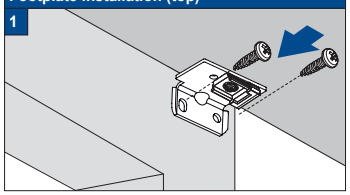

Footplate installation (bottom)
2

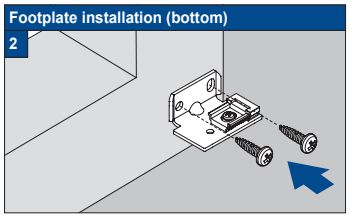

Installation sequence
3

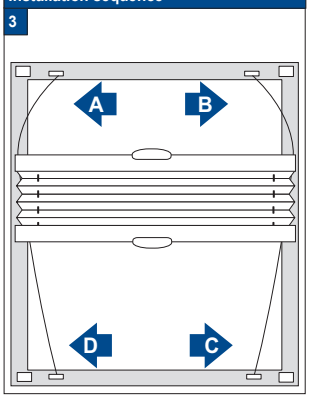

Footplate installation sequence

3-A1

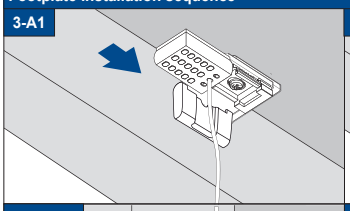

3-A2

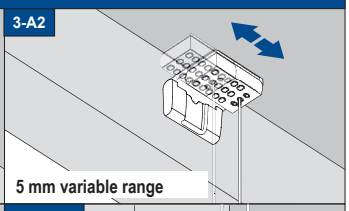

3-B/C/D1

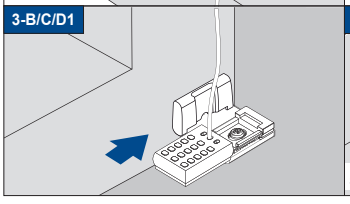

3-B/C/D2

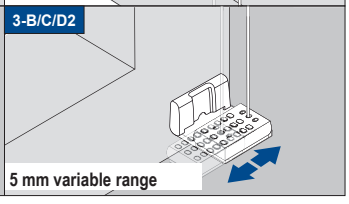

Operation
4

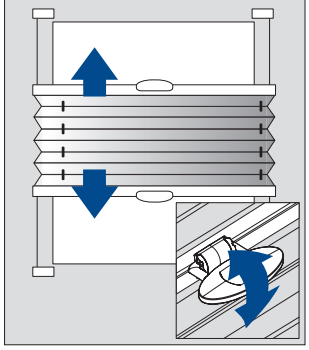
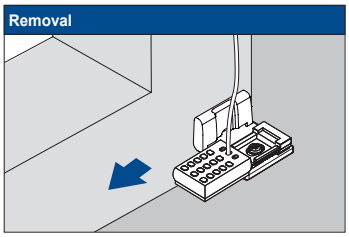
Removal